



DECKBLATT ZUM ORIGINAL-DATENBLATT DES HERSTELLERS

260-500W | ANLEITUNG GERÄTE

HERSTELLER Polyamp AB
PRODUKTSERIE PM500-Serie

Ihr direkter Ansprechpartner für Polyamp-Produkte!

Die Ing. Erhard Fischer GmbH ist Ihr zuverlässiger Partner für die Produkte von Polyamp AB. Wir bieten Ihnen nicht nur hochwertigen technischen Support, sondern auch kompetente Beratung und maßgeschneiderte Lösungen für Ihre individuellen Anforderungen.

Ob Standardprodukt, kundenspezifische Geräte oder Schaltschrankbau. Wir freuen uns, Sie bei Ihrer Lösungsfindung mit eingehender Kundenberatung kompetent unterstützen zu können.

Kontaktieren Sie uns für technische Beratung oder ein individuelles Angebot!

Wir freuen uns auf das Gespräch mit Ihnen.



IHR ANSPRECHPARTNER

Martin Sochor



+43 2236 42694-40



powersupply@ing-fischer.at



Ing. Erhard Fischer GmbH



Weissenbach 101 | AT-2371 Hinterbrühl



www.ing-fischer.at



ING. ERHARD FISCHER GMBH

**Immer die passende Lösung für Industrie-
Stromversorgungen, Heizfolien & Messtechnik**

PM500

Installation manual



Warranty

All Polyamp DC/DC converters are warranted against defective material and workmanship. This warranty is valid for 5 years from the date of delivery. We will repair or replace products which prove to be defective during the warranty period. The warranty is valid only if the converter is used within specification.

Manual

This manual is as complete and actual as possible at the time of printing. However, the information may have been updated since then. Polyamp AB reserves the right to make changes in this manual without notice.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance instructions in the literature accompanying.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons

Caution!

To prevent the risk of electric shock, do not open enclosure. No serviceable parts inside. Refer servicing to qualified service personnel only.



PM500 INSTALLATION MANUAL

CONTENTS

1 BEFORE INSTALLATION	4
2 INSTALLATION	4
3 PARALLEL CONNECTION	5
3.1 SERIES DIODE ON THE OUTPUT	5
3.2 CONNECTING CONVERTERS IN PARALLEL ON THE OUTPUT	5
3.3 ADJUSTING OUTPUT VOLTAGE WHEN UNITS ARE PARALLELED ON THE OUTPUT	6
4 MULTIPLE LOADS AT THE OUTPUT	6
4.1 SHORT-CIRCUITS	7
5 ALARM	7
6 OUTPUT OVER VOLTAGE PROTECTION	7
7 ISOLATION VOLTAGE TEST	8
7.1 DC ISOLATION TEST OUTPUT TO INPUT, CASE AND ALARM	8
7.2 DC ISOLATION TEST INPUT TO OUTPUT	8
7.3 DC ISOLATION TEST INPUT TO CASE	8
7.4 AC ISOLATION TEST INPUT TO OUTPUT, CASE AND ALARM	9
8 TROUBLE SHOOTING	9
8.1 THERE IS NO OUTPUT VOLTAGE	9
8.2 THE INPUT FUSE BLOWS WHEN THE INPUT IS CONNECTED	9
8.3 THE CONVERTER STARTS AND STOPS REPEATEDLY	9
8.4 FAULT REPORT	10

1 Before installation

On the front panel label the following is displayed: Converter type name, maximum input current, input voltage range, nominal output voltage, nominal output current, article number, batch number and serial number. The converter type name consists of model name PM500 or PM260 followed by input code and output voltage. Two examples:

- "Type: PM500 110C/24" has input code "110C" and nominal output voltage 24Vd.c.
- "Type: PM500 110/48" has input code "110" and nominal output voltage 48Vd.c.

Input, output and case are galvanically separated from each other. You can thus choose how you want the system connected.

The electrical safety system is a class I, which means that protective earth has to be connected.

The input is protected against reverse polarity by a combination circuit with inrush current limit circuit. If reverse voltage occurs at installation the converter will not start. The reverse voltage will not cause damage to the unit.

The input shall be fused with an approved fuse with a slow blow characteristic and high breaking capacity. Fuses are not included due to the following two reasons.

1. DC-networks should be fused at the distribution point to protect the cable, Siemens 3NA3-series are recommended.
2. Different applications require different types of fuses.

If the converter is mounted in an electric vehicle, an external series diode on the input is recommended. Please contact your Polyamp dealer.

If the converter supplies a DC-motor, we recommend an external parallel diode at the motor poles to protect against reverse voltages.

For the disconnection ability, an external disconnection device, which is able to disconnect both polarities, shall be incorporated with the input power supply cord. The disconnection device must be properly labelled and easy accessible. For recommended disconnection devices, see Table 1.

PM500/PM260 disconnection devices

Input voltage code	Disconnection device
110	10A, Schneider Electric MGN61528
110C	
220	6A, Schneider Electric MGN61526
220D	

Table 1. Recommend disconnection devices.

2 Installation

The converter is supplied with mounting plates. With these you can mount the converter in any direction. However, to fulfil fire enclosure requirements, the converter should not be mounted with the alarm connector side facing downwards. Also, if the converter is mounted with the input and output connectors facing downwards, the four M6 mounting holes on that side should be blocked with non-flammable material, e.g. metal screws.

At full output power the converter produces up to about 45 watts of heat that has to be dissipated from the convection cooled converter to ambient air. In order to avoid overheating the converter, thus tripping the overtemperature protection circuit and thereby causing temporary shutdown, ambient air must not exceed +55 °C and a sufficient volume of air must be allowed to flow freely around the converter. If the converter is mounted in a narrow space an external fan is recommended.

Note that the expected life of the converter is dependent on converter temperature. For every 10°C that the temperature is lowered the expected life is approximately doubled. It is therefore crucial to cater for good ventilation and, if possible, to reduce ambient temperature.

To meet the EMC specifications in the enclosed Declaration of Conformity use twisted-pairs for connecting input, output and alarm. Shielded cables are not necessary.

1. Connect protective earth to the connection marked no 40. Use a ring terminal that has been crimped with an appropriate tool.
2. Connect the output. The converter output is short-circuit proof by a constant current limit which works unlimited in time. Therefore there is no need to fuse the load (unless you use multiple loads, see below). The current

limit is fixed to approximately 105% of nominal output current.

- If the converter is to be connected in parallel at the output, please consult *3 Parallel connection* on page 5.
 - If you use multiple loads, please consult *4 Multiple loads at the output* on page 6.
 - If you intend to use the alarm, please consult *5 Alarm* on page 7.
3. Connect the input cables. Bundle input cables together at the terminals separated from the output cables. Make the same arrangement on the output side. This is to make sure one cable will not bridge the insulation barrier in case of coming loose.
 4. Start the converter with your external input disconnection device.


Beware of hazardous voltages!

- The output voltage can be adjusted +10% to -5% of nominal output voltage with the potentiometer marked V.ADJ on the alarm panel. Clockwise turn increases the output voltage. The potentiometer has 15 or 20 turns. If you have connected units in parallel on the output, the procedure of adjusting the output voltage is described in *3.3 Adjusting output voltage when units are paralleled on the output* on page 6.
5. When the converter is disconnected, switch-off the input voltage with the disconnecting unit. Disconnect the input cables first, then output and last the protective case connection.

3 Parallel connection

If a redundant power supply system is requested, two or more converters can be connected in parallel. To achieve redundancy the number of converters must be dimensioned to carry the whole load even if one converter is faulty. Connect your load to the + output after the series diode (cathode), see *Figure 1*.

Another reason for connecting two or more converters in parallel is to get more power. Use the output with series diode, see *Figure 1*.

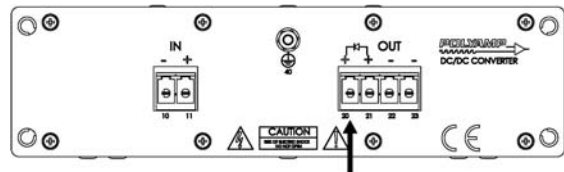

Series diode output

Figure 1. The series diode output marked with an arrow

3.1 Series diode on the output

The series diode protects the converter output from external voltage sources. A series diode is necessary if the output is connected in parallel with another power supply or if you require redundant operation. If a converter breaks down with an internal short-circuit on the output and other converters are connected in parallel on the output, the broken unit will short-circuit the others if the series diode is not used. This might cause excessive heat or even fire in the faulty unit.

If the series diode is used, the alarm relay will switch to "ALARM" on the faulty unit if one converter breaks down in a redundant power supply system. Otherwise there will be no alarm indication from a faulty converter unless all units are in current limit and the output voltage drops 10% below nominal output voltage.

Fuse the inputs separately to achieve redundancy.

3.2 Connecting converters in parallel on the output

The expected life of the converter is dependent on converter temperature. It is therefore important for paralleled unit to share the load as equal as possible to reduce the converter temperature. To achieve good current sharing the converters must have separate cables to the load. The cables should be dimensioned to have a voltage drop, U_d , between the converter and the load at maximum current capacity, see *Figure 2* and *Figure 3*.

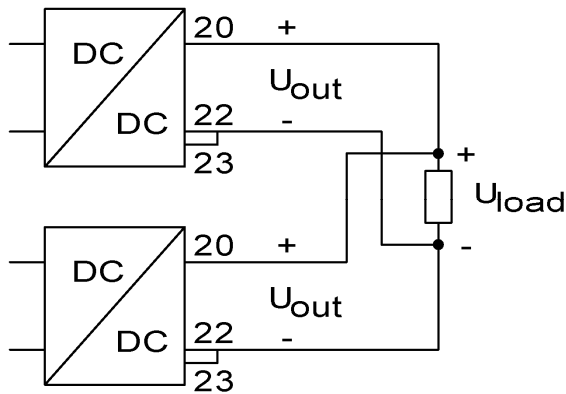


Figure 2. Voltage drop $U_d = U_{out} - U_{load}$

- When the series diode is used, which we recommend, the voltage drop should be approximately 1.0% of nominal output voltage (to also compensate for the negative temperature coefficient of the diode).
- When the series diode is **not** used, **this is not recommended**, the voltage drop should be approximately 0.5% of nominal output voltage.

Note that the voltage drop affects the load regulation (the voltage at the load), see Figure 3.

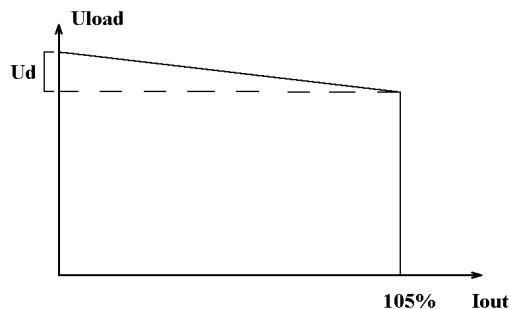


Figure 3. Load regulation with voltage drop U_d between output and load

3.3 Adjusting output voltage when units are paralleled on the output

1. Connect and start all converters according to 2 *Installation* on page 4. We recommend using the series diode and separate cables as mentioned above in 3.2 *Connecting converters in parallel on the output*.
2. Measure the voltage at the load and on the converters. Connect voltmeters as showed in Figure 4. If you have only access to one voltmeter you must move it around to make

the adjustments. This will take time but is of course possible.

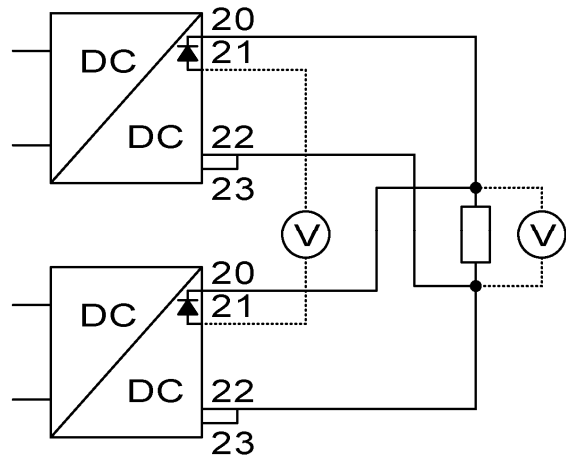


Figure 4. Adjusting output voltage

4. To **increase** the output voltage.

Increase the output voltage by turning the potentiometer marked "V.ADJ" clockwise on the unit with the lowest output voltage until you reach the desired voltage at the load or until the output voltage does not increase anymore (as the unit is in current limit). To find the unit with the lowest output voltage you can measure the voltage difference before the series diode, as in Figure 4. Repeat until you reach the desired output voltage at the load.

5. To **decrease** the output voltage.

Decrease the output voltage by turning the potentiometer marked "V.ADJ" counter clockwise on the unit with the highest output voltage until you reach the desired voltage at the load or until the output voltage does not decrease anymore (as the other units supply all current). To find the unit with the highest output voltage, measure the voltage difference before the series diode, as in Figure 4. Repeat until you reach the desired output voltage at the load.

6. To achieve good current sharing, adjust all converters so that the voltage difference before the series diode is 0.00V between all units that are connected in parallel and so that the voltage at the load is still the desired.

4 Multiple loads at the output

If you are using several loads, we recommend fusing them separately with fast acting fuses.

Some considerations regarding short-circuits should be taken. See below.

4.1 Short-circuits

1. If there is a short-circuit in one branch and the total current in all branches **does not** exceed 105% of the nominal current of the converter (see label on front panel), the output voltage will not be affected. The time for the fuse to blow can be calculated from the data sheet of the fuse if you know the short-circuit current through the fuse.
2. If there is a short-circuit in one branch and the total current in all branches **does** exceed 105% of the nominal current of the converter, the output voltage will drop until the fuse is blown. Depending on the impedance of the short-circuit (whether it is abrupt or merely an overload) and the resistance of the load cables, the effects of a short-circuit will vary.

Long cables reduce short-circuit currents, resulting in longer delay until the fuse is blown and hence an increased voltage dip. Light overload does not necessarily result in a blown fuse.

To reduce the voltage drop at short-circuit and if any branch has more than approximately 30% of the total output current of the converter, a large external capacitor is recommended. Such a capacitor will supply the peak current needed to blow the fuse, see *Figure 5*. To calculate the capacitor needed, use the following formula:

$$C = 1.2 \times (I_s \times \Delta t) / \Delta U$$

1.2 = Safety margin.

I_s = Short-circuit current through the fuse.

Δt = Time before the fuse blows (see data sheet on the fuse).

ΔU = Acceptable voltage dip before the fuse blows.

Example:

You have a 1A fuse with fast characteristic and the short-circuit current is 10A. The data sheet gives you that $\Delta t = 10\text{ms}$. The output voltage is 24V, and you can accept 10% voltage drop =>

$$\Delta U = 24 \times 0.1 = 2.4\text{V.}$$

The capacitance you need:

$$C = 1.2 \times (I_s \times \Delta t) / \Delta U = 1.2 \times 10 \times 0.01 / 2.4 = 50,000\mu\text{F}$$

Choose a capacitance with a rated voltage of at least 115% of nominal output voltage of the converter.

Repeat this calculation for all branches and choose the highest capacitance value.

3. It is sometimes difficult to estimate the short-circuit current when the nature of a fault is unknown. In this case a voltage dip might appear under some short-circuit conditions even with a large capacitor present. If a voltage dip is critical in one branch it is recommended to use a separate DC/DC converter supplying this branch.

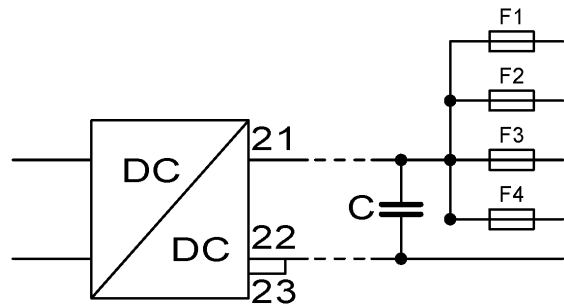


Figure 5. Connecting multiple loads.

5 Alarm

The alarm relay switches to "ALARM" state if the output voltage is not within +15% /-10% of nominal output voltage.

Otherwise the relay contact is in the position "NORMAL".

The alarm relay can be connected in two ways:

1. Normally Open (NO).

Connect twisted-pair (0.25mm² -1.5mm²) from centre pin of the removable alarm connector and connector pin marked "ALARM".

2. Normally Closed (NC).

Connect twisted-pair (0.25mm² -1.5mm²) from centre pin of the removable alarm connector and connector pin marked "NORMAL".

The relay is isolated 4.3kVd.c. from input and 2.5kVd.c. from output and case. Maximum rating for the alarm is 0.3 A and 30 V.

6 Output over voltage protection

All models are equipped with an internal output over voltage protection circuit (OVP). It consists of an additional voltage regulator operating in parallel with the main regulator. The output voltage is limited to approximately 15% above the nominal output voltage. As long as the OVP

circuit is active the alarm relay is set to "ALARM" state.

7 Isolation voltage test

Each converter has been isolation tested in factory before delivery. Warning! Isolation test shall only be performed by personnel aware of the dangers and hazards of the test.

7.1 DC isolation test output to input, case and alarm

1. Disconnect all cables from the converter.
2. Connect the alarm terminals of the converter to case. Connect the input terminals to case.
3. Connect the output terminals to each other.
4. Connect your isolation tester between output and case. See *Figure 6*.
5. Raise the voltage of the isolation tester from 0 to 2.5kVd.c. Check that the leakage current does not exceed 5 μ A. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
6. Turn off the isolation tester and discharge the test voltage with a 10 M Ω resistor between output and case.

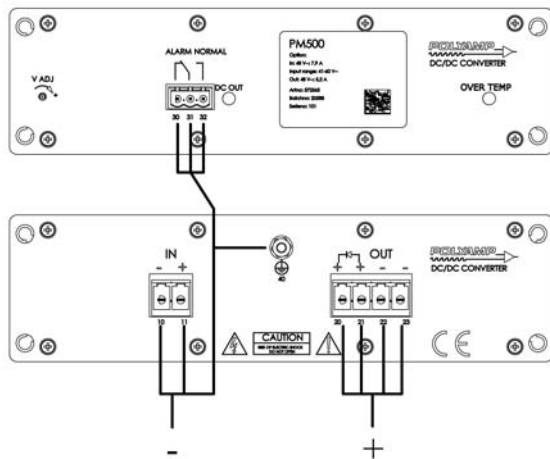


Figure 6. Output to case isolation voltage test.

7.2 DC isolation test input to output

1. Disconnect all cables from the converter.
2. Connect the alarm terminals of the converter to the output terminals.
3. Connect the input terminals to each other.
4. Connect your isolation tester between input and output. See *Figure 7*.

5. Raise the voltage of the isolation tester from 0 to 4.3kVd.c. Check that the leakage current does not exceed 5 μ A. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
6. Turn off the isolation tester and discharge the test voltage with a 10 M Ω resistor between input and output.

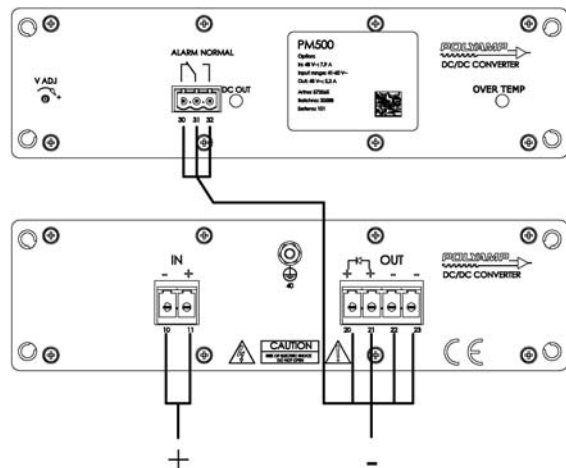


Figure 7. Input to output isolation voltage test.

7.3 DC isolation test input to case

1. Disconnect all cables from the converter.
2. Connect the input terminals to each other.
3. Connect your isolation tester between input and case. See *Figure 8*.
4. Raise the voltage of the isolation tester from 0 to 3.6kVd.c. Check that the leakage current does not exceed 5 μ A. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
5. Turn off the isolation tester and discharge the test voltage with a 10 M Ω resistor between input and case.

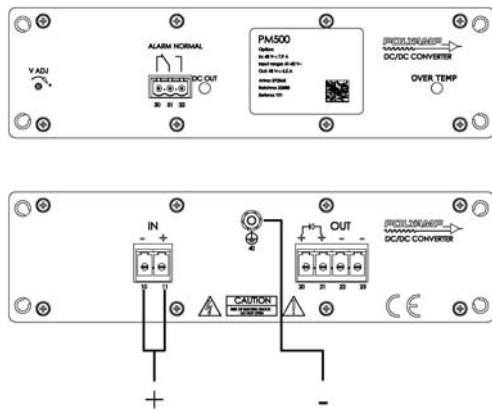


Figure 8. Input to case isolation voltage test.

7.4 AC isolation test input to output, case and alarm

Beware of the rather high capacitive earth currents (about 100mA) that will occur during this test.

1. Disconnect all cables from the converter.
2. Connect the output terminals and alarm terminals of the converter to case.
3. Connect the input terminals to each other.
4. Connect your isolation tester between input and output. See *Figure 9*.
5. Raise the voltage of the isolation tester from 0 to 2.5kVa.c. The voltage should not be applied for more than one (1) minute or the Y-capacitors might be damaged.
6. Turn off the isolation tester and discharge the test voltage with a 10 MΩ resistor between input and case.

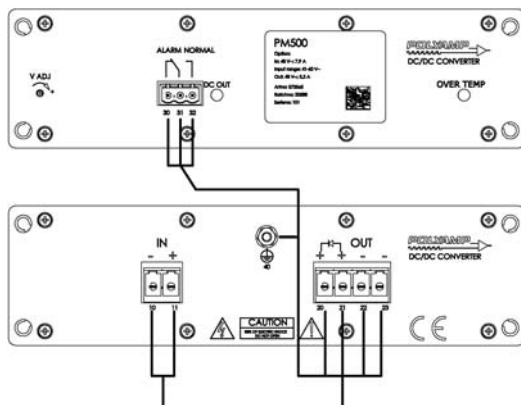


Figure 9. Input to output, case and alarm isolation voltage test

8 Trouble shooting

8.1 There is no output voltage

1. Check that the input fuse is not broken.
2. Check that the input voltage polarity is correct.
3. Check that the input voltage is within the specified limits, see front label.
4. The converter may be in current limit due to excessive output current or an external short-circuit on the output.
 - Disconnect the input.
 - Disconnect the load.
 - Connect the input again and measure the output voltage.

If the converter now starts the load was too heavy or there was a short-circuit.

- If there is an external short-circuit, remove it.
 - If the load is too large decrease the load or consult your Polyamp dealer.
5. The unit is broken. Contact your Polyamp dealer.

8.2 The input fuse blows when the input is connected

1. Check that the input voltage polarity is correct.
2. Check that the input fuse is of time delay type and with correct current rating. See *Table 1*.
3. The unit is broken. Contact your Polyamp dealer.

8.3 The converter starts and stops repeatedly

All models have an over/under voltage protection which shuts down the converter if the input voltage is not within specified limits (see front label).

1. The cables to the converter input may be under-sized, causing too high voltage drop in the supply cables.
2. Your supply does not have enough current capacity so the input voltage to the converter drops below specified limit.



8.4 Fault report

We suggest that you return a faulty converter to:

POLYAMP AB

Box 229 / Bäckgatan 10

S-597 25 ÅTVIDABERG

SWEDEN

Tel: +46 120 85400

Fax: +46 120 85405

or to your local Polyamp distributor.

To help us locate the fault, please describe the fault and how and when it occurred.