

DECKBLATT ZUM ORIGINAL-DATENBLATT DES HERSTELLERS

3000W | DATENBLATT GERÄTE

HERSTELLERCamtec Power Supply GmbHPRODUKTSERIECPS-i3000-Serie [U+I regelbar]

Ihr direkter Ansprechpartner für Camtec-Produkte!

Die Ing. Erhard Fischer GmbH ist Ihr zuverlässiger Partner für die Produkte von Camtec Power Supply. Wir bieten Ihnen nicht nur hochwertigen technischen Support, sondern auch kompetente Beratung und maßgeschneiderte Lösungen für Ihre individuellen Anforderungen.

Ob Standardprodukt, kundenspezifische Geräte oder <u>Schaltschrankbau</u>. Wir freuen uns, Sie bei Ihrer Lösungsfindung mit eingehender Kundenberatung kompetent unterstützen zu können.

Kontaktieren Sie uns für technische Beratung oder ein individuelles Angebot!

Wir freuen uns auf das Gespräch mit Ihnen.



+43 2236 42694-40
 powersupply@ing-fischer.at
 Ing. Erhard Fischer GmbH
 Weissenbach 101 | AT-2371 Hinterbrühl
 www.ing-fischer.at

ис. екнаяр гізснея емен Immer die passende Lösung für Industrie-Stromversorgungen, Heizfolien & Messtechnik





CPS-i3000 3000W Lab Power Supply scalable 19" embedded 2U/3U or hardmount in all positions, PFC 0,99



Features:

- 3D Heat Dissipation
- Real time I/V programming
- Real time I/V-monitoring
- Reference voltage f. autonomous programming
- CSB Current Share Bus
- Inhibit for safe interlocking & Remote Shutdown
- Remote Shutdown
- Power Good Relay AC-ok and DC-ok

- Precise dynamics on load change
- Series & parallel operation up to 100kW
- EMC conducted class B, radiated class A
- Efficiency 92-94%
- PFC Powerfactor 0,99
- Variable controlled fans from Papst
- Long lifetime under hard operation
- Fast down programming option PS
- Solid 2U and 3U subframes available

Model	Voltage programmable	Current programmable
CPS-i3000.018	0 – 18Vdc	0 – 185A
CPS-i3000.030	0 – 30Vdc	0 – 125A
CPS-i3000.060	0 – 60Vdc	0 – 62,5A
CPS-i3000.090	0 – 90Vdc	0 – 41,5A
CPS-i3000.150	0 – 150Vdc	0 – 25,0A
CPS-i3000.300	0 – 300Vdc	0 – 12,5A



Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.1/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





CPS-POWER - a unique concept of 3D-heat, open mechanics, design to service and open scalability

The Camtec CPS-i models are high-precision lab power supplies "Made in Germany". These power supplies are designed for scalable power systems in the testing automation.

For more than 25 years the Camtec Power Supplies manufactures high-end switch mode power supplies in Germany. A field breakdown of below 0,004% over a 10-year period under review approves our ambitious quality concept. Each manufactured Camtec product passes several 100% random tests for each detailed function and a full-load Burn-In test.

Although it is not required from the safety norms our production applies a routine safety test to each manufactured device, even if it is an extra low-voltage model. The components in the assembled device pass stress aging to achieve an even level and to prevent from delayed failures. Our internal product engineering guidelines provide a clear target: Camtec product reputation must say "mount and forget". Quality is never a mere promise for our team.

The CPS-i laboratory power supplies provide low noise and ripple, a very fast programming, and a precise setting at high load changes. With an efficiency of 92-94% and a power factor of 0.99, the devices are highly energy efficient.

Equipped with high-end capacitors of outstanding lifetime our power supplies guarantee a very long and reliable operation time. The circuit design of the CPS-i Series allows cope playing with complex loads. The internal protection circuits protect the power supply and the connected system, even in exceptional situations. The CPS-i series is protected from high transients by strong filters with high energy efficiency. All inputs and outputs and the interface are electrically isolated. The design specifications call for the highest standards of safety and interference suppression. The device was developed in accordance with the requirements of EN61010-1, EN61010-2-201, EN62368-1 and the EMC standards EN55032 conducted Class B, radiated Class A.

The mechanical design of the CPS-i3000 device series is unique. It is the first power supply line in the world market, which can be flexibly adapted to any installation situation.

The forced-air-cooling system with monitored and load-dependent variable fan control, allows a detached position in the system. By simple and cost-effective wall brackets the device can be integrated in any position in 90° increments. Unlike comparable power supplies Camtec comes here for the first time to let the system integrator completely free hand. The cooling concepts for supply and exhaust air can be designed to completely remove the heat dissipation from the cabinet. Complex and expensive air-conditionings for switch cabinets can be reduced to a minimum or even eliminate. Brackets for air channels are available as an option. In selecting the fan, as with all our power supplies, in our opinion we use with the German manufacturer EBM Papst the highest quality and most reliable devices in the world market.

The installation of the power supply in a 19" subrack is guaranteed in the simplest way. Again, our engineers have decided to offer a completely open and flexible system. The optional front panels allow the power supplies the use in either a 2U or 3U subrack. In this way we can realized 9kW in 2U-rack and up to 15kW in a 3U-rack with the CPS-i3000 models. With Zero-Stacking the series allows scalable high-power DC source in a comparable small 19-inch rack unit. For power applications with high dynamic range above 15kW we recommend contacting our support team.

As accessories for the CPS-i Camtec provides matched 19 "subframes. Our subracks deserve the name of a carrier, because they really are extremely stable made of stainless steel. The power supplies have nickelplated steel pins to position the power supplies in the subframes. The so married together systems withstand the toughest conditions. All mechanical connections in the power supplies or on the racks are constructed with A2 or nickel-plated screws, so that they provide maximum protection against corrosion and conductivity.





Features

Idling behavior

The CPS-i Series is permanently open-circuit proof. When an output voltage is preset it comes stable. If a load is switched suddenly, the unit stabilized within <1ms. An overshoot of the output voltage is irrelevant.

Start behavior

The power supply has a start delay of 1s to stabilize all measuring circuits for the interface messages accurately. The power supply starts with a ramp (soft start) of 100ms. The output voltage does not overshoot regardless of whether a load is connected or not.

Galvanic isolation and insulation

The switching power supply is galvanically isolated between the input and the output. All major digital inputs and outputs of the interface are electrically isolated.

V programming (Ureg)

The output voltage of the CPS-i power supply can be adjusted by a control signal. The setting is linear to the input signal.

C programming (Ireg) The output current of the CPS-i power supply can be adjusted by a control signal. The setting is linear to the input signal.

V Monitor (Umon)

The power supply provides real-time monitoring of the output voltage. It is the exact and real value at the output terminals. If the sense line is used, the real value is measured directly at the load. The latency signal preset to the measured value is negligible since the control circuit is constructed completely analogously.

C Monitor (Imon)

The power supply provides real-time monitoring of the output current. It is the exact and real value at the output terminals. The latency signal preset to the measured value is negligible since the control circuit is constructed completely analogously.

Constant Voltage or Constant Current Mode (CV/CC)

The device can be operated as a DC voltage source or a constant current source. The operating mode is signaled on the interface.

Auxiliary Voltage (AUX)

The devices feature a 12V / 500mA auxiliary voltage to operate external peripheral

Potentiometer Internal Control (Uadj/ladj)

If the power supply shall only set with the built-in internal potentiometers, the use of the internal reference voltage is possible. The power supply requires no external signals and can operate completely autonomously.

Potentiometer External Control (Uadj/ladj)

If the power supply shall only set with external potentiometers, the use of the internal reference voltage is possible. The power supply requires no external signals and can operate completely autonomously.

Sense Mode

The power supply has a sense mode to compensate for voltage drops of 2V per load line.

Fuse Mode

The unit can be operated in fuse mode. In the fuse mode, the unit is turned off and locked when it was more than 5 seconds in constant current mode to protect a connected defect load. The lock can be controlled remotely or repeal by disconnection from the mains again.

Continuous Mode

The unit can be operated in continuous mode. In the continuous mode, the power supply provides constant current mode in a continuous flow and no ticker-operation.

Master-Slave Mode (Ureg-OUT/Ireg-OUT)

The master-slave mode can be defined in the parallel operation. One device can be set as the master, the other involved network units act as a slave and the setting signals follow current / voltage, which are commanded by the Master. This ensures that all devices are operated synchronously.

Current Share Bus (CS)

In parallel operation, the involved network components communicate with each other and share the total power evenly to each other.

Remote Shutdown (SD) All CPS-i devices have a remote shutdown (open collector or switching contacts).

Inhibit Mode (Interlock)

The inhibit circuit reliably prevents unintentional starting of the power supply. The control loop is internally locked. Since this blocking is done progressively it is active even when the control signal, is missing due to a cable break or temporarily suspend. A premature restart of the power supply is prevented. The inhibit input can be connected to a relay or switch. If the contact is interrupted, the power supply is switched off. If the contact is closed again, the power supply restarts.

DC and AC Fail

By DC-fail the power supply reports that the power output is disabled. By AC-fail the power supply reports an AC undervoltage. Both signals have separate outputs. Each of them can be selected between NO and NC.

Over Voltage Protection (OVP)

On the interface is a message signal. Until the abolition of the fault the device switches off.

Over Current Protection (OCP)

On the interface is a message signal. Until the abolition of the fault the device switches off.

Temperature Control (TEMP)

The operating temperature of the power supply can be monitored via a signal applied to the interface output.

Temperature Alarm (TA)

If the device is in the critical range, a warning signal is applied to the interface.

Over Temperature Thermal Shutdown (OT)

The device has a thermal monitoring: shutdown with automatic restart. The OT signal is applied to the interface.

Fan Failure Monitoring (FF)

If it comes to a fan failure or blocking, a signal is applied to the interface. The speed signal of the fan is monitored. Thus, even a creeping fault is detected at an early stage and there is a warning long sold separately in front of a fan failure.

Fast Down Programming & PowerSink (PS)

For fast down programming an internal PowerSink is offered as an option. The current sink discharges the output electrolytic capacitors and eleminates skidding inge fed tensions

A further output allows to control external PowerSink modules. The internal current sink for fast down programming must be installed at the factory.

3D Heat Dissipation

Our aligned and controlled heat dissipation design opens possibilities that are formerly being reserved to custom designed power supplies: Steplessly hard mount of the CPS-i2000/3000 power supply modules in a 3D-room. In practice that means that one can mount the modules into every angle imaginable. Our 3D heat dissipation (3D-HD) ensures optimal cooling in each mounting position you may consider.

Design-to-Service:

Most recorded failures in the field concern the signal interface of a power supply. Camtec offers new concept of design-to-service that allows the customer easily to exchange the interface himself in the field. The analogue and digital interfaces apply plug & play self calibrating and can be used independent from the model CPS-i/EX/EP 2000 & 3000 Thus, system down cost is being reduced and only a small amount of spare parts need to be stocked by the customer





Technical Data Table

AC Input Range	184-264Vac										
AC Input Frequency	47-63Hz										
DC Input Range	250-375Vdc										
AC Input Rated	230Vac <15.0A										
DC Input Rated	250Vdc <14.0A 375Vdc <9.3A										
DC Voltage Programmable	0 - 18Vdc	0 - 30Vdc	0 - 60Vdc	0 - 90Vdc	0 - 150Vdc	0 - 300V					
DC Current Programmable	0 - 185A										
Over Voltage Protection	21Vdc	35Vdc	70Vdc	105Vdc	175Vdc	350Vdc					
Over Current Protection	204A	138A	69A	46A	27,5A	13,8A					
Ripple Noise 230Vac 20MHz	35mVpp	35mVpp	75mVpp	100mVpp	200mVpp	400mVpp					
Auxiliary Voltage			30mVpp, not influ								
Power Rated		-18Vdc, 184-264\									
Cooling		· ·	nitored fans from	EBM Papst (Ger	many)						
Efficiency	typ. 92-94% 230				ilaily,						
Power Factor Control (PFC)	0,99 / 230Vac un										
Short Circuit Resistance	ves										
Open Circuit Protected	ves										
Base Load (OCP)		oen circuit protec	ted)								
Load Regulation	< ± 0.05% 0-100		(icu)								
Load Regulation Time	<1ms on load sy										
Accuracy			n: ≤ ± 0,5%, Imon	•<+1% rof•<	+1%						
Temperature Control			overy (+70°C, ou			(mm)					
Hold Up Time		nains buffering at		iside measuring		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					
Inrush Current			ive electronic inr	ush protection (r	o simple NTC)						
Startup Delay	typ. 1s										
Softstart	typ. 100ms										
Ambient Temperature		perating, derating	1 2 5%/°C ~50°C								
Storage Temperature	- 40°C+85°C	perating, derating	j 2,5 /8/ C >50 C								
Ambient Conditions		on-condensing @	25°C, climate cla	ee 3K3 nollutio	n degree 2						
ROHS) 2015/863 confor		ass sits, politito	i degree z						
REACH	EG No. 1907/200										
EMI for the models			60 class B / .090/.	150/ 300 class A	all models radiat						
EMS/EMI	EN61000-6-2,3,4	cieu .010/.030/.00		130/.300 Class A,	an mouers raula	ieu ciass A					
Safety		1010-2-201 EN62	368-1, EN60950-1	EN60204-1							
Protection Class I	PE connection r		.500-1, EN00950-1	, EN00204-1							
Leakage Current		2.8mA, 230Vac 5	∩⊔								
Isolation Input to Output	3000Vac	2.0111A, 230Vac 5	ULTZ								
Isolation Input to Case											
	2500Vac 500Vdc , ≥60Vdc= 2800Vdc										
Isolation Output to Case			uros, statistis tim	o botwoon failur	after repaire)						
MTBF (IEC61709)	419000h (Meantime Between Failures: statistic time between failures after repairs)										
MTTF (IEC61709) Dimensions (HxWxD)	146105h (Meantime To Failure: statistic time to ever fails)										
• •	84x126,4x444mm 3,3x5x17,5 Inch (without frontplate, note cable outlet in planning)										
Weight Input Power Connections	4,4kg / 9,7lbs	A (lookod by bei	anott) included								
		A (locked by baj		retection is inclu	alad						
Output Power Connections	brass-Powerbar	s with metric M8	thread, a touch p	rotection is inclu	luea						
Programming Time Vout Ims											

Programming Time Vout [ms]

Model	0-18Vdc	0-30Vdc	0-60Vdc	0-90Vdc	0-150Vdc	0-300Vdc
Rise Time 0-100%, 10/100% Load, [ms] typ.	15/15	15/15	15/15	15/15	15/15	15/15
Slew Rate 90-10%, 10/100% Load, [ms] typ.	19/1,9	46/4,6	33/3,3	23/2,3	31/3,1	26/2,6
Slew Rate PS-Option 100-0%, 0% Load, [ms] typ.	200	200	200	200	200	200
Output Capacity, [mF] typ.	19,4	19,4	3,5	1,07	0,52	0,11
Latency [ms]	1	1	1	1	1	1





Manual und Technical Details

Ana	logue Inter	face CON	11 (Connector Model Weidmueller	1277320000 = included)	
Pin	Name	Туре	Function	Signal	Remarks
1	AC OK-1	Output	Closers, Signal AC OK	Relay	Potential-free
2	DC OK-1	Output	Closers, Signal DC OK	Relay	Potential-free
3	AC OK-2	Output	Center, Signal AC OK	Relay	Potential-free
4	DC OK-2	Output	Center, Signal DC OK	Relay	Potential-free
5	AC OK-3	Output	Break, Signal AC OK	Relay	Potential-free
6	DC OK-3	Output	Break, Signal DC OK	Relay	Potential-free
7	SB	Input	Control Signal Standby	Switch / Open Collector	
8	SD	Input	Control Signal Shutdown	Switch / Open Collector	
9	DGND	-	Digital Ground	-	
10	+12V AUX	Output	Auxiliary Voltage	12Vdc/0,5A ±0,5V 30mVpp	≤1000uF, O-Ring Diode
11	DGND		Digital Ground	•	···· , ·
12	INH	Input	Control Signal Inhibit (Interlock)	Switch	
Ana	logue Inter		2 (Connector Model Weidmueller	1277330000 = included)	
Pin	Name	Туре	Function	Signal	Remarks
1	DGND	- "	Digital Ground	-	
2	TEMP	Output	Temperature Control	Voltage 10mV/°C	
3	DGND	-	Digital Ground	-	
4	PSOT	Output	Signal PowerSink Over Temperature	Open Collector	
5	DCF	Output	Signal DC Failure	Open Collector	
6	ACF	Output	Signal AC Failure	Open Collector	
7	FF	Output	Signal Fan Failure	Open Collector	
8	INH	Output	Signal Inhibit Active	Open Collector	
9	от	Output	Signal Over Temperature	Open Collector	
10	TA	Output	Signal Temperature Alarm	Open Collector	Early warning
11	OCP	Output	Signal Over Current Protection	Open Collector	, ,
12	CC	Output	Signal Constant Current Mode	Open Collector	
13	OVP	Output	Signal Over Voltage	Open Collector	
14	CV	Output	Signal Constant Voltage Mode	Open Collector	
Ana	logue Inter	face CON	13 (Connector Model Weidmueller	1277340000 = included)	
Pin	Name	Туре	Function	Signal	Remarks
1	AGND	-	Analog Ground	-	
2	Imon	Output	Current Monitor	0-5Vdc / 5mA, 0-10Vdc / 5mA	
3	PS	Output	Control Signal External PowerSink	Prepared Control Output	
4	Umon	Output	Voltage Monitor	0-5Vdc / 5mA, 0-10Vdc / 5mA	
5	CS	I/O	Current Share Bus (CSB)	Parallel Operation	Bidirectional
6	Ireg-OUT	Output	Current Programming Slave	0-5V / 5mA	
7	AGND	-	Analog Ground	-	
8	Ureg-OUT	Output	Voltage Programming Slave	0-5V / 5mA	
9	AGND	-	Analog Ground	-	
10*	ladj	Output	Potentiometer Connection Current		With external poti
11	Uref	Output	Reference Voltage	5,2Vdc / 5mA, 10,4Vdc / 5mA	
12*	Uadj	Output	Potentiometer Connection Voltage		With external poti
13	CS	I/O	Current Share Bus (CSB)	Parallel Operation	Bidirectional
14	Ireg-IN	Input	Current Programming	0-5V, 0-10V, 0-20mA, 4-20mA	
15	AGND	-	Analog Ground	-	
16	Ureg-IN	Input	Voltage Programming	0-5V, 0-10V, 0-20mA, 4-20mA	
Ana	logue Inter	face CON	14 (Connector Model Weidmueller	1277290000 = included)	
Pin	Name	Туре	Function	Signal	Remarks
1	Sense -	Input	Sense Connection	-	2V / load line
2	Sense -	Input	Sense Connection	-	
3, 4			NC	-	Must not be connected
5, 6			NC	-	
7	Sense +	Input	Sense Connection	-	2V / load line
8	Sense +	Input	Sense Connection	-	


PIN10/12* when no external control signal shall be used the device can be set with internal potentiometers. Please connect Pin10 with Pin14 and Pin12 with Pin16 to operate this mode.

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.5/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





Schematic of the internal circuits analogue interface CON1 - 4

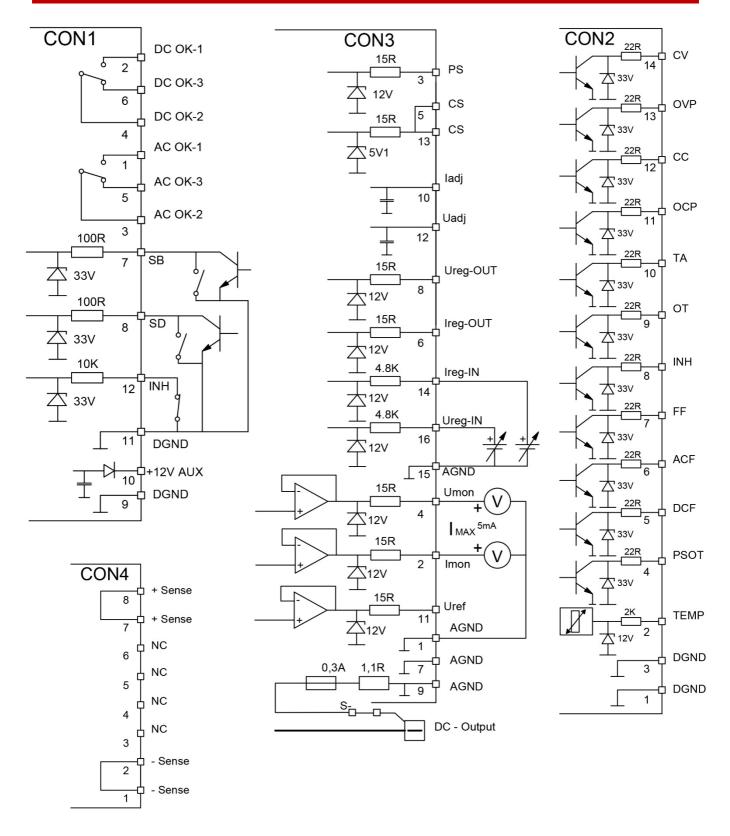


Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.6/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)






- Interface pluggable Push-Pull-Connectors from Weidmueller (included)
- Input Power Connector Neutrik NAC3FCA (included)
- Output Power Connection M8 Powerbars
- Lock-Pins snap into the 2U/3U 19" subrack

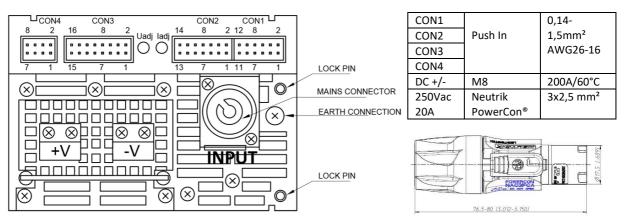

Neutrik NAC3FCA

WARNING OUTPUT CONNECTION INSTRUCTION:

Mount the cable lugs directly on the output terminals followed by a washer, a split washer, and a screw. Failure to follow the order can result in excessive heat! Recommended torque: 8-10Nm. Use only screws, washers and split washers supplied with this unit.

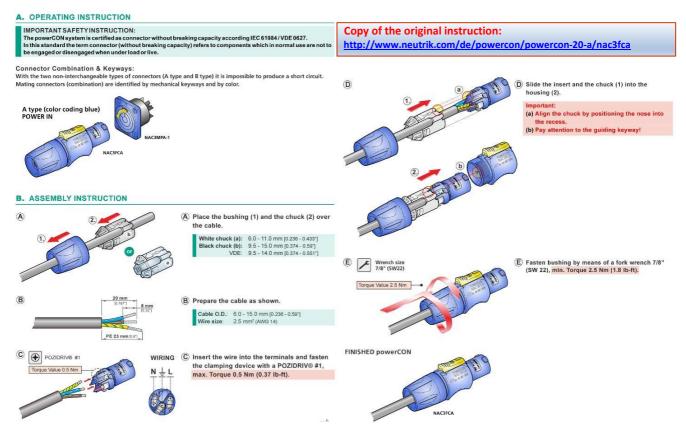


Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.7/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





LED Opera	ting Signal		
CV/OVP	CV Constant Voltage Mode LED lights Green		GRN/RED
	OVP Overvoltage maloperation or interference voltage LED lights Red	1	CV/OVP
CC/OCP	CC Constant Current Mode LED lights Yellow		CC/OCP
	OCP Over Current Protection LED flashes Red, also see >>Fuse Mode<<		- TAVOT
TA/OT	TA Temperature Alarm LED lights Yellow, warning temperature shutdown pending		•
	OT Over Temperature Shutdown LED lights Red		- INH/FF
INH/FF	INH Inhibit (Interlock) Shutdown LED lights Yellow		- SD/SB
	FF Fan Failure LED lights Red		•
SD/SB	SD Shutdown LED lights Yellow		V L YEL/RED
	SB Standby LED lights Red		

Configuration of the Analogue Interface												
Mode	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	\$11	S12
0-5V	0	0	0	0	0	1	0	0	0	0		
0-10V	0	1	0	0	1	0	0	1	1	1		
0-20mA	1	1	0	1	1	0	0	1	1	1		
4-20mA	1	0	1	1	0	0	1	1	1	1		
CS active											0	
CS non-active											1	
Fuse Mode												0
Continuous Mode												1
operation mode. In s	Warning! CS (Current Share Mode) only applies when a current distribution must take place while parallel operation mode. In single or parallel operation without the need of CS, always switch CS with S11 to OFF=1. Factory set: 0-10V Programming / CS non-active (S11=1), Continuous Mode (S12=1)											

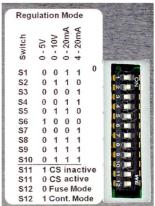

Programming/Monitoring V/C Analogue Interface (Ureg-IN/Ireg-IN) (Umon/Imon)

The standard programming of the CPS-i Series is an analog interface. The output voltage is linearly proportional to the adjusted analog control signal. If the control signal 0V and/or 0A applies the power supply delivers 0V at the output. The power supply is already working from 0V output voltage and low load with high precision.

The monitor signal is analog linear to the output voltage. The monitor signal for current and voltage is the real value that is measured directly at the output of the power supply. If a sense line is connected to compensate for the voltage drop across the load lines, the monitor signal is exactly the value that is measured at the connection point of the sense line. The description of the power supply in the sense operation is carried out in a separate section.

The analog inputs and outputs are non-floating. The mass is connected to the DC negative output.

The adapter provides the ability to select the desired input / output via a DIP switch. The burden of the control voltages is $1M\Omega$. The burden of the current interface is 500Ω . The latency to full compensation of V/C on the interface from 0-100% is 15ms for all CPS-i models.

If the power supply is operated with a low load, the down-programming time up to the desired set point may be very long. The power supply has large built-in capacitors and an enormous energy reserve. A similar effect occurs by skidding input energy, which is not easily removed from the power supply. A PowerSink (PS) modul can be ordered as an option for each CPS-i power supply unit. The PS option is used for fast down programming and the degradation of skidding energy fed. The option must be equipped in the factory.

For further information about the PS option, please refer to the technical details in a separate section.





Programming V/C via Potentiometer (Uadj/ladj) – Stand Alone Operation

The power supply is equipped with 2 potentiometers Uadj and Iadj for setting voltage and current. To enable the setting on the potentiometer, configure the interface via the DIP switch for 0-5V. Connect each Uadj and Iadj of CON3 to the inputs Ureg-IN and Ireg-IN. If one of the two potentiometers is not used, the other value can still be programmed via the interface. In such case, only the control signal 0-5V can be used.

Fuse Mode

The Fuse Mode can be used mode to prevent a major damage to a defective load. Fuse Mode can be activated via the associated switch S12 DIP switch.

If the device is in the Fuse Mode (DIP switch S12=0), the device switches off when the constant current operation is taking longer than typ. 5s. The red OCP LED flashes with a period of 0,4s. The PSU is locked. The interlock can be canceled by the power supply is either switched off by the mains input, SB or SD contact for a moment.

Continuous Mode

If you select Continuous Mode at DIP switch S12 (DIP switch S12=1), the device provides continuous power. It also applicable in the Constant Current Mode. Factory setup = Continuous Mode

Over Load Behaviour

The CPS-i changes from the standard operation mode into the high current mode when high and fast overload occurs. Thus, it provokes a restart after a 30ms break and delivers continuous current to the output. This special behaviour is a protection for the power supply and for the connected load.


Compensation of Load Line Drop Voltage (Sense ++/--), standard operation mode

The CPS-i power supply has a Sense Mode to compensate for the voltage drop over long load lines. The compensation amounts to a maximum of 2V per load line. Under certain circumstances, it can be expected to apply more complicated external interference suppression. If sense is not used, CON4 Sense +/+ and Sense -/- shall necessarily be connected by short bridges to the power outputs (factory setup).


Sense operation: Remove the bridges between Sense +/+, Sense -/- and the power outputs. Connect the sense lines directly to the load. It is irrelevant which of the local connections Sense +/+ and Sense -/- are applied. Pay attention to the polarity of plus and minus of the load to prevent damage to the power supply. To avoid interference, twist the sense lines. To reduce inductive effects, we recommend that the load lines position is close to each other. To supply a pulsating load, the use of an electrolytic capacitor and a cermic capacitor has proved. The internal Over Voltage Protection (OVP) of the power supply controls the DC power directly to the DC output terminals. In case of an error the OVP acts automatically (see OVP values corresponding table).

Operating in the sense mode requires that the maximum output voltage will not be exceeded. Maximum 2V per load lead can be compensated. The voltage drop in the load lines decreases the maximum output voltage rating. Example of a a 30V unit: if the total voltage drop in the load leads is 2V it is necessry to subtract this value from the maximum programmable output voltage 30V - 2V = 28V maximum available voltage at the load.

The sense terminals are directly connected to the power outputs.



Local Sensing (factory setup)



Remote Sensing (twisted sense lines)

WARNING! PROTECT TO MIX UP SENSE CONNECTIONS. THIS COULD CAUSE SERIOUS DAMAGE TO THE DEVICE.

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.9/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)






Compensation of Load Line Drop Voltage (Sense ++/--) battery charger operation mode

Remote Sensing as a battery charger

If the CPS-i power supply unit is used as a battery charger, it is recommended to refrain from sensing. It can lead to severe damage to the power supply, if the polarity of the sense line is confused (field experience: such error often occurs when system service is required, e.g., when the batteries are changed). If it is necessary to use sensing, proceed as described in the figure below. Proven approaches are 250mA for the fuses and 3...5A load capacity of diodes.

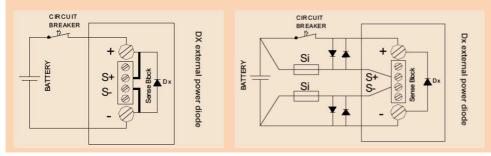

Master-Slave Mode Analogue Interface (Ureg-OUT/Ireg-OUT)

The CPS-i laboratory power supplies offer the possibility of Master-Slave operation. To increase the output current, up to 5 units of the same type and output voltage can be connected in parallel with the standard analogue interface. One device takes over the function of the master, the other devices assume the slave function. The Current Share Bus (CS) marries the involved power supplies together. The CS bus allows a symmetrical current distribution in parallel operation of several identical CPS-i units.

Define the power supply as the master, which you want to address with your control. A coding of the power modules as the master or the slave is required (see below table). The signals of the interface are looped together. Connect Ureg-OUT and Ireg-OUT of the master to Ureg-IN and Ireg-IN from to slave. Connect the corresponding Ureg-OUT/Ireg-OUT from the slave to the next slave, etc. All the monitoring signals of each power supply are still available.

		Ma	ster					Sla	ave		
	0-5V	0-10V	0-20mA	4-20mA	Potis		0-5V	0-10V	0-20mA	4-20mA	
S1	0	0	1	1	0	S1	0	0	0	0	
S2	0	1	1	0	0	S2	0	0	0	0	
S3	0	0	0	1	0	S3	0	0	0	0	
S4	0	0	1	1	0	S4	0	0	0	0	
S5	0	1	1	0	0	S5	0	0	0	0	
S6	1	0	0	0	1	S6	1	1	1	1	
S7	0	0	0	1	0	S7	0	0	0	0	
S8	0	1	1	1	0	S8	0	1	1	1	
S9	0	1	1	1	0	S9	0	1	1	1	
S10	0	1	1	1	0	S10	0	1	1	1	
S11	0	0	0	0	0	\$11	0	0	0	0	
S12	1	1	1	1	1	S12	1	1	1	1	

Current Distribution in Parallel Mode (CS), CSB Current Share Bus

In parallel operation, a uniform current distribution between the participating power supplies is important. To prevent one of the power supplies going early into the current limitation and display error message. An uneven load and thus premature aging of the participating devices is prevented.

Connect CON3 contact 5 (CS) to contact 13 of the slave. Are other devices involved in the parallel operation, you may grind the CS bus through from unit to unit. The current division between the devices will be performed automatically. The accuracy of the current distribution is max. $\pm 5\%$ at lout $\ge 0.5x$ lout max. Derate total output current by 5% to prevent unit overload condition.

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.10/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





External Shutdown (SD)

The power supply is set to the Shutdown mode, when the control input is either shorted via a relay contact, a switch contact or an NPN transistor with open collector (voltage drop <1V, current typ. 1,5mA). Alternatively, a voltage of 10 to 30V (typ. 12V/1.5mA, 24V/5.5mA) can be applied.

If the shutdown repeals the power supply starts with a delay of 35ms.

Using the soft start, the current and the voltage rises within 100ms continuously to the default set values. Between control input SD and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.



Standby (SB)

The power supply is switched to standby mode when the control input is shorted optionally via a relay contact, a switch contact or an NPN transistor with open collector (voltage drop <1V, current typ. 1.5mA). Alternatively, a voltage of 10 to 30V (typ. 12V/1.5mA, 24V/5.5mA) can be applied.

If the standby repeals, the power supply starts with a delay of 500ms.

Using the soft start, the current and the voltage rises within 100ms continuously to the default set values. Between control input SB and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.



Inhibit / Interlock (INH)

The power supply is equipped with a control input Inhibit (INH) to interlock a DC-shutdown of the power supply.

For the nominal operation of the power supply the connections of the control input "INH" must always be short-circuited. The power output is switched off as soon as the connection between the contacts of the control input INH is interrupted. If Inhibit is repealed, the power supply starts with a delay of 35ms. Using the soft start, the current and the voltage rises within 100ms continuously to the default set values. Between the INH contacts applies a current of typical 2mA.



! Warning against damage in case of incorrect connection assignment

Never apply any external voltage to the control input INH. Never connect a resistor to the INH interface. Control input INH can only be connected to a floating contact, for example a switch or a relay. Between control input INH and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.





Signal Inhibit (INH) Interlock

INH is high as soon as the connection between the contacts of the control input INH is interrupted. Output Open Collector $I_{MAX}=10mA$, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$.

Auxiliary Voltage +12V (AUX)

The power supply offers an auxiliary voltage 12V/500mA. The accuracy is ±500mV. Ripple & Noise 30mVpp. The auxiliary voltage is not affected by the control signals Standby (SB), Shutdown (SD) and Inhibit (INH) and remains always active. Between auxiliary voltage and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

DC-OK Relay (DC Power Good)

The signal DC OK has potential-free relay contacts (changeover). The contacts of CON1 Pin2 and CON1 Pin4 are closed (relay coil is energized) when the power output is active. The contacts CON1 Pin2 and CON1 Pin4 are open when the power output is inhibited by SB, SD, INH, ACF, OT, FF, OVP or a defective PFC. Contact load (resistive load): 30Vdc/1A, 60Vdc/0.3A, 30Vac/0.5A. Between the relay contacts and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

DC Fail Signal (DCF)

DCF is high when the power output is disabled by SB, SD, INH, ACF, OT, FF or OVP. Output Open Collector $I_{MAX}=10mA$, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$.

AC-OK Relay (AC Power Good)

The Power Good relay reports whether the input voltage is too low or missing. The notification signal AC OK is generated with potential-free relay contacts (changeover).

The contacts of CON1 Pin1 and CON1 Pin3 are closed (relay coil is energized) when the input voltage is higher than typ. 175Vac or 210Vdc (switch-on). The contacts of CON1 Pin5 and CON1 Pin3 are closed (relay coil is not energized) when the input voltage is lower than typical 165Vac or 145Vdc (turn-off). Contact load (resistive load): 30Vdc/1A, 60Vdc/0.3A, 30Vac/0.5A.

Between the relay contacts and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

AC Fail Signal (ACF)

The alarm signal ACF is high when the input voltage is lower than typ. 165Vac or 145Vdc. The alarm signal ACF is low when the input voltage is higher than typ. 175Vac or 210Vdc. Output Open Collector I_{MAX}=10mA, V_{LOW} ≤0,6V, V_{MAX} =30V.

Over Voltage Protection Signal (OVP)

If an over-voltage occurs to the output (for example, defective components, external feed voltage), it is followed by the shutdown of the power output. A periodic restart attempts (ticker operation period 1s) and a message is triggered: The alarm signal OVP is high.

Output Open Collector I_{MAX}=10mA, V_{LOW}≤0,6V, V_{MAX}=30V.

Constant Voltage Mode (CV)

The signal CV is high when the power supply operates as a constant voltage source. Output Open Collector $I_{MAX}=10$ mA, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$. When OVP, INH, SB, SD, FF, OCP, OT or a defective PFC occur the message signal CV is low because the power output is switched off. The change between the CV and the CC mode is automatic. Please pay attention to the DIP switch setting of the Fuse Mode to avoid provoking malfunction.

Constant Current Mode (CC)

The signal CC is high when the power supply operates as a constant current source. Output Open Collector $I_{MAX}=10$ mA, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$. When OVP, INH, SB, SD, FF, OCP, OT or defective PFC occur the message signal CC is low because the power output is switched off. The change between the CV and the CC mode is automatic. Please pay attention to the DIP switch setting of the Fuse Mode to avoid provoking malfunction.

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.12/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 <u>www.camtec-gmbh.com</u> - <u>info@camtec-gmbh.com</u> (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)






CC-Mode & Over Current Protection in the Fuse Mode (OCP)

The alarm signal OCP is high, when the constant current operation appears for more than typical 5s (Fuse Mode DIP switch S12=0).

Output Open Collector $I_{MAX}=10mA$, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$. By switching the unit off and on from SB, SD, or the mains, the power supply returns into operation.

The power output is switched off. The PFC and the fans are not switched off. In the SB or SD mode the message signal OCP is low. In the INH mode the status of the power supply does not change.

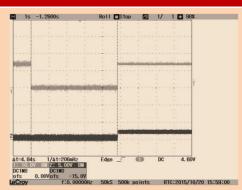

Temperature Control Signal (TEMP)

The power supply has a temperature monitor. Here, the temperature of the power supply is continuously measured. The signal TEMP provides a voltage U_{TEMP} corresponding to the internal temperature of the power supply T_{INT} : $T_{INT}=U_{TEMP}/(10mV/^{\circ}C)$, U_{TEMP} in mV. Measuring range: +2...+150°C. Output impedance 2kOhm. Between the TEMP signal and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

Temperature Control Signal (PSOT) of the PowerSink / Fast Down Programming Option

The PowerSink option has a temperature monitor. The alarm signal PSOT is high when the internal PowerSink module is overheated. Output Open Collector I_{MAX}=10mA, V_{LOW}≤0,6V, V_{MAX}=30V. If PSOT is active, the power supply is still operating. The internal PowerSink option is not operating if the OT applies.

Temperature Warning (TA)

The power supply has a Temperature Warning. The signal provides the user the option to save important data before the power supply shut down from OT, or to put his system in the emergency mode. The alarm signal TA is high when the internal temperature of the power supply is approximately 5°C below the overtemperature protection threshold. Output Open Collector $I_{MAX}=10mA$, $V_{LOW}\leq0.6V$, $V_{MAX}=30V$.

Over Temperature Shutdown (OT)

The alarm signal OT is high when the temperature of the power supply is higher than the over-temperature protection threshold. Output Open Collector $I_{MAX}=10$ mA, $V_{LOW}\leq 0.6$ V, $V_{MAX}=30$ V.

Fan Fail Signal (FF)

The power supply fans are continuously monitored. FF occurs when one or both fans have an error (lower speed due to bearing contamination, blockage, or failures). A failure message is sent: The status signal FF applies high. Output Open Collector I_{MAX}=10mA, V_{LOW}≤0,6V, V_{MAX}=30V.






C/V Chart and Operating Point

The output voltage set Vout is always linear proportional to the control signal Ureg.

The desired control signal is selected via the DIP switcher: 0-5V, 0-10V, 0-20mA oder 4-20mA.

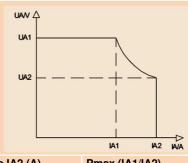



Model	Value UA1 (V)	Value IA1 (A)	Value UA2 (V)	Value IA2 (A)	Pmax (IA1/IA2)
CPS-i3000.018	18Vdc	150A	14,4Vdc	185 A	2700/2664W
CPS-i3000.030	30Vdc	100A	24Vdc	125A	3000/3000W
CPS-i3000.060	60Vdc	50A	48Vdc	62,5A	3000/3000W
CPS-i3000.090	90Vdc	33,3A	72Vdc	41,5 A	2997/2988W
CPS-i3000.150	150Vdc	20A	120Vdc	25A	3000/3000W
CPS-i3000.300	300Vdc	10A	240Vdc	12.5A	3000/3000W

Inrush Current Limiter (electronic)

The power supply unit has an electronic current limiter $(230Vac=14,6A_{rms}/20,7A_{peak})$.

It is a precisely working circuit instead of a usual simple NTC solution. The accuracy is $\pm 10\%$, regardless of the operating temperature and the duty cycles (interval $\geq 10s$). We recommend the smallest circuit breaker a characteristic B with 25A.




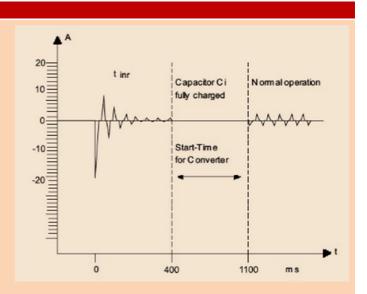

Temperature Monitoring & Derating

The maximum ambient temperature during operation is + 60°C. If the overtemperature protection is activated, the power supply but not the fan is switched off.

The measuring point is 50mm outside the power supply at the front side (fan/blower input). The power supply unit starts automatically when it has cooled down.

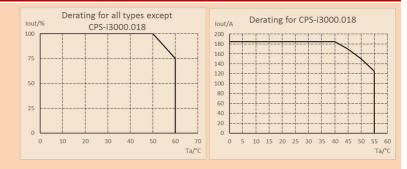

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.14/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)






Open Collector Circuit Interface

Between all the open collector outputs and power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

(Note: this applies to all signals from CON1 and CON2, regardless of whether they are designed as open collector, or not)

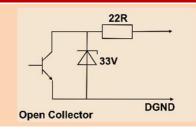

Series Operation


Two or more units of the same model and output voltage can be operated up to a total voltage of 600Vdc in series (not applicable to EN62368-1). Due to the dielectric strength of the internal components used, only the models with an output voltage of 60Vdc and later are approved for series operation. Other power supplies are not approved for series operation above 60Vdc.

If the units are remotely controlled via the analog interface it is compulsory to use a potential-free control voltage!

Paralleling & N+1 Decoupling

To increase the overall power of the power supply, two or more devices of the same model with the same output voltage may be operated in parallel. When using the Current Share Bus, the number of devices is limited to 5 pcs. For applications without the Surrent Share Bus, more than 5 devices can be operated in parallel. For power applications with a high dynamic range above 15kW, we recommend contacting our support team. We recommend using a busbar for the DC power connector. Make sure that the cable lengths and cable crosssections of all power supplies to the busbar or to the star point are identical. Allow proper connection for low contact resistance. Connect the sense lines to the star point or busbar. To avoid measurement errors, select the line length from the star point or from the busbar to the load as short as possible and use the maximum possible conductor cross-section.


The CPS-i models have no internal O-ring diode, to operate the devices N+1 redundant.

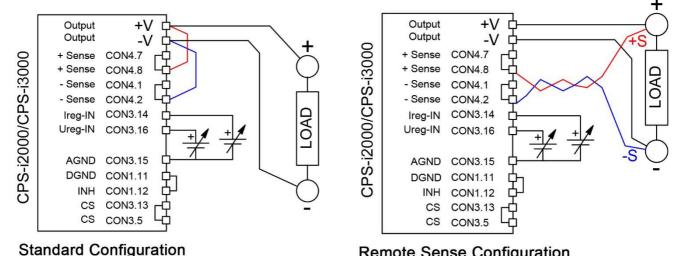

Remote Sense Configuration






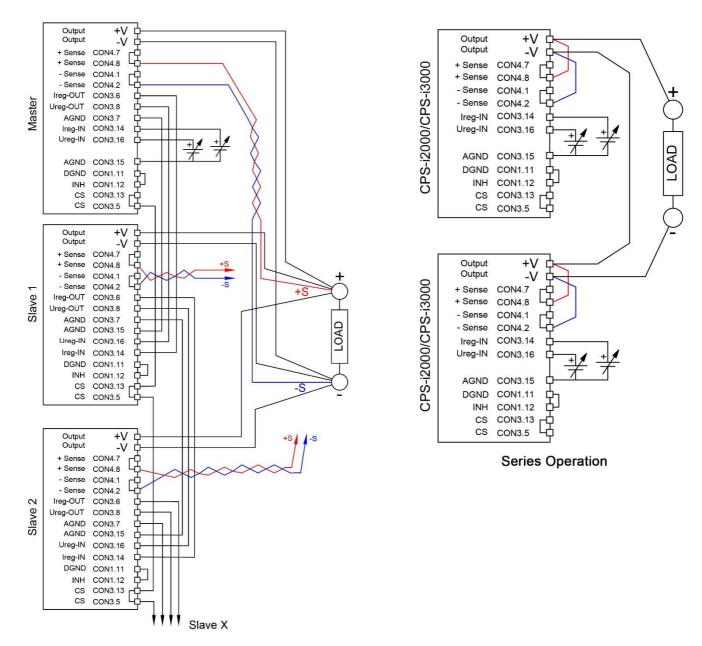

Parallel Master - Slave Operation





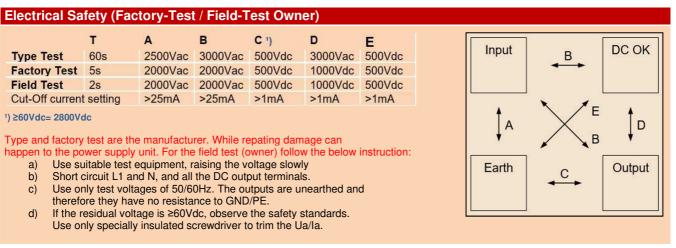



Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.17/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)








Aluminium-housing IP20.

Cooling is achieved via front-to-rear fans.

To ensure adequate heat dissipation, 50mm to the front and 150mm blockade-free distance from the device back wall must be guaranteed.

The harnesses are to be designed and installed to that the air outlet of the unit is not being blocked.

In a rack mounting of multiple subracks, the rear distance of the cablemanagement increases, depending on the type of the air duct. An optional cableaccession assistance for the racks will be available soon.

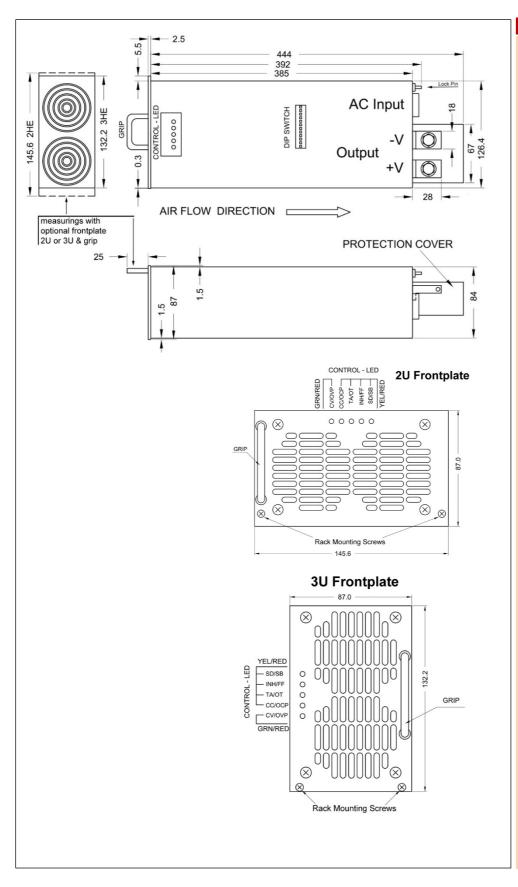

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.18/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





Available Options

Power Sink Option for Fast Down Programming (PS)

Fast Down Programming:


The input capacitance of a power supply can be discharged only slowly at low load. A fast down-programming of the output voltage of an almost non-loaded power supply is not possible. This fact leads to undesirably long cycle times on a test bench. The PS option works as an electronic circuit. It communicates with the control circuit of the power supply and therefore permits a much higher dynamics of the system, as an external passive base load.

Maximum continuous power capability is 10W. Maximum switching frequency is 1Hz. The switching frequency must be reduced if external electrolytic capacitors are used.

Back-Feed Energy:

In the back-feed power by a consumer a regenerative current is charging the output capacitors. The output voltage will increase. The following formula shows dv/dt=i/C.

When an electronic current sink is used, the output voltage remains constant at the set value. The current sink provides fast dynamic response.

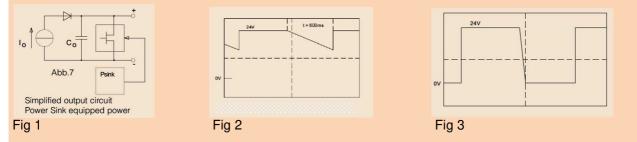

A Power Sink (see Fig. 1) enables fast down programming at low load conditions or without a load. For comparison, see Figure 2 (without) and Figure 3 (with PS option). When paralleling the power supplies the SD, SB and INH need to be connected in parallel to apply synchronized operation.

The PS-option must be installed in the plant because it is not accessible from the outside. It is necessary to match the power supply after installation and perform electrical safety testing. We therefore recommend a required a necessary PowerSink option to be purchased with the power supply unit.

Retrofit PS option:

Individual trained CPS-i dealer are pre-retrofit able. Alternatively, a CPS-i power supply may also be sent to the factory. Please apply for this an RMA number from our service.

Test Certificate and Calibration


Optionally we offer with the delivery of a CPS-i power supply a Manufacturer's Inspection Certificate of electrical setpoint / actual values. The power supply then is "calibrated". Such Manufacturers Calibration Certificate for each power supply can uniquely be assigned via the device serial number. A manufacturer calibration of a CPS-i can frequently be done via controlled recirculation on a regular basis. Please request the help of your local CPS-i dealer or contact us directly: service@camtec-gmbh.com





19" Subrack 2U & 3U

2U Subrack for 1-3 CPS-i3000 with up to 9kW continuous power 3U Subrack for 1-5 CPS-i3000 with up to 15kW continuous power

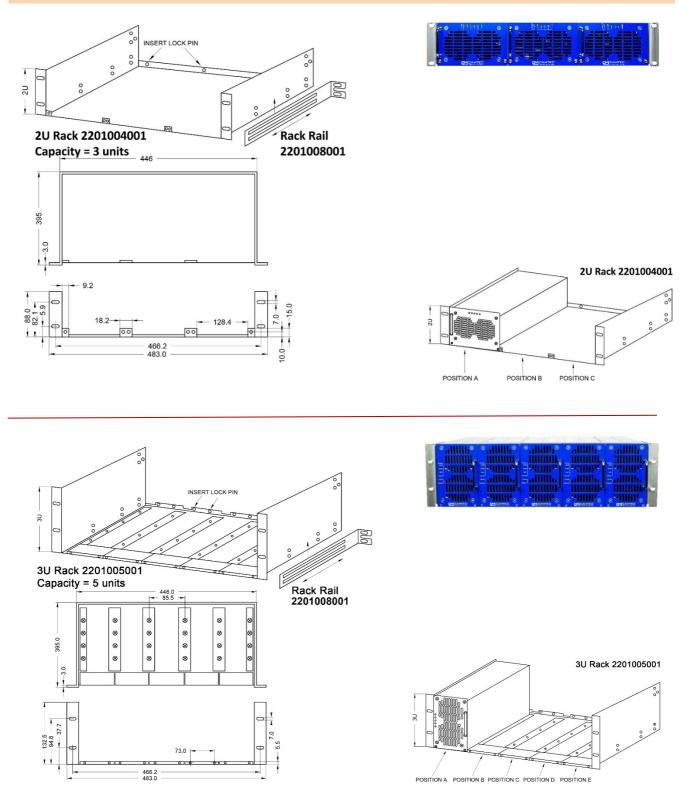

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.20/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





Wall Mount Option & 3D Heat Dissipation (3D-HD)


Our aligned and controlled heat dissipation design opens possibilities that are formerly being reserved to custom design power supplies:

Steplessly hard mount of the CPS-i2000/3000 power supply modules in a 3D-room.

In practice that means that one can mount the modules into every angle imaginable. Our **3D** Heat **D**issipation (**3D**-HD) ensures optimal cooling in each mounting position you may consider.

All you may consider is to make sure, that at least a distance of 5cm (2 Inch) to the front cooling slots and 15cm (6 Inch) to the rear cooling openings are guaranteed to prevent from blocking the airflow. The cabling must also not block the heat dissipation.

When the CPS-i2000/3000 is hard mounted the optional front plates cannot be used. The standard control LEDs allow visualization from any mounting position (see below drawing).

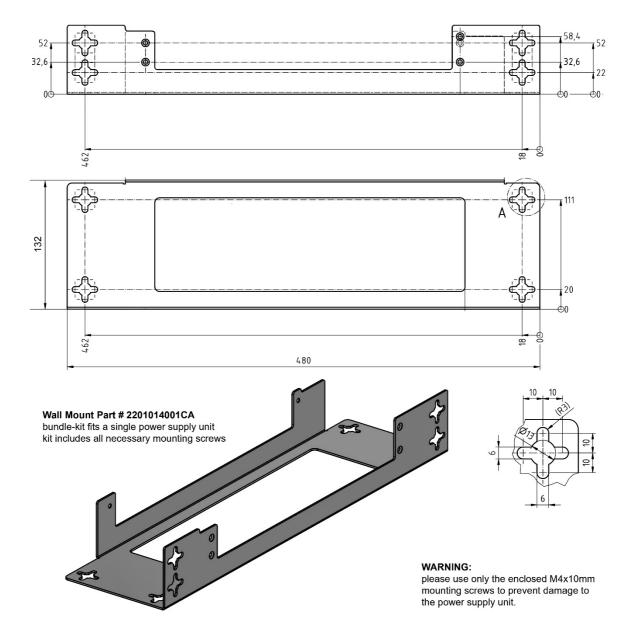

Camtec Power Supplies GmbH - Gewerbestrasse 30 - DE-76327 Pfinztal / Germany P.21/22 (03.2022.00.0) Tel. +49 (721) 46596 - 0 Fax +49 (721) 46596 - 77 www.camtec-gmbh.com - info@camtec-gmbh.com (Subject to alterations. This product is not designed to be used in applications such as life support systems wherein a failure or malfunction could result in injury or death)





Product CodeInformationArticle NumberCPS-i300.018(R2)0-18Vdc model incl. analogue interface3041107001CACPS-i300.030(R2)0-30Vdc model incl. analogue interface3041107002CACPS-i300.060(R2)0-60Vdc model incl. analogue interface3041107003CACPS-i300.090(R2)0-90Vdc model incl. analogue interface3041107003CACPS-i300.090(R2)0-90Vdc model incl. analogue interface3041107004CACPS-i300.090(R2)0-150Vdc model incl. analogue interface3041107005CACPS-i300.300(R2)0-300Vdc model incl. analogue interface3041107005CACPS-i300.300(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.300,R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.00,DS/R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.00,DS/R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.00,DS/R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.30,DS/R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.30,DS/R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.30,DS/R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i300.30,DS/R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming	Ordering Codes		
CPS-i3000.030(R2)0-30Vdc model incl. analogue interface3041107002CACPS-i3000.060(R2)0-60Vdc model incl. analogue interface3041107003CACPS-i3000.090(R2)0-90Vdc model incl. analogue interface3041107004CACPS-i3000.150(R2)0-150Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107005CACPS-i3000.300,R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.030,PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.060,PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.050,PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.300,PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and	Product Code	Information	Article Number
CPS-i3000.66(R2)0-60Vdc model incl. analogue interface3041107003CACPS-i3000.90(R2)0-90Vdc model incl. analogue interface3041107004CACPS-i3000.150(R2)0-150Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i3000.300,R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.030,PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.050,PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.050,PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.300,PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300,PS(R2)0-300	CPS-i3000.018(R2)	0-18Vdc model incl. analogue interface	3041107001CA
CPS-i3000.090(R2)0-90Vdc model incl. analogue interface3041107004CACPS-i3000.150(R2)0-150Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface3041107006CACPS-i3000.300(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CACPS-i3000.30.PS(R2)0-18Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.030.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.90.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.30.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.30.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.30.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.30.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.30.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.30.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.30.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming201010001CA <td< td=""><td>CPS-i3000.030(R2)</td><td>0-30Vdc model incl. analogue interface</td><td>3041107002CA</td></td<>	CPS-i3000.030(R2)	0-30Vdc model incl. analogue interface	3041107002CA
CPS-i3000.150(R2)0-150Vdc model incl. analogue interface3041107005CACPS-i3000.300(R2)0-300Vdc model incl. analogue interface3041107006CACPS-i3000.018.PS(R2)0-18Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107011CACPS-i3000.030.PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.060.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.90.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming201107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast	CPS-i3000.060(R2)	0-60Vdc model incl. analogue interface	3041107003CA
CPS-i3000.300(R2)0-300Vdc model incl. analogue interface3041107006CACPS-i3000.018.PS(R2)0-18Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107011CACPS-i3000.030.PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.060.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.090.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACertifacte CalibrationSeparate works certificate for manufacturer calibration of the power supply403110701CA19" Frontplate 2UMounting Kit Included	CPS-i3000.090(R2)	0-90Vdc model incl. analogue interface	3041107004CA
CPS-i3000.018.PS(R2)0-18Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107011CACPS-i3000.030.PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.060.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.090.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CA201006001CA201006001CA201006001CA201007001CA19" Frontplate 2UMounting Kit Included2201	CPS-i3000.150(R2)	0-150Vdc model incl. analogue interface	3041107005CA
CPS-i3000.030.PS(R2)0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107012CACPS-i3000.060.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.090.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming201006001CA19" Frontplate 2UMounting Kit Included2201000001CA2201000001CA19" Subrack 2U3 Modules mountable	CPS-i3000.300(R2)	0-300Vdc model incl. analogue interface	3041107006CA
CPS-i3000.060.PS(R2)0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107013CACPS-i3000.090.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming304110701CA19" Frontplate 2UMounting Kit Included2201006001CA19" Subrack 2UMounting Kit Included2201009001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201005001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rac	CPS-i3000.018.PS(R2)	0-18Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107011CA
CPS-i3000.090.PS(R2)0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107014CACPS-i3000.150.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CA201006001CA2201006001CA2201007001CA19" Frontplate 3UMounting Kit Included220100001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201005001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	CPS-i3000.030.PS(R2)	0-30Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107012CA
CPS-i3000.150.PS(R2)0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107015CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACertifacte CalibrationSeparate works certificate for manufacturer calibration of the power supply4031107001CA19" Frontplate 2UMounting Kit Included2201006001CA19" Blindplate 3UMounting Kit Included2201007001CA19" Blindplate 3UMounting Kit Included2201009001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	CPS-i3000.060.PS(R2)	0-60Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107013CA
CPS-i3000.300.PS(R2)0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming3041107016CACertifacte CalibrationSeparate works certificate for manufacturer calibration of the power supply4031107001CA19" Frontplate 2UMounting Kit Included2201006001CA19" Frontplate 3UMounting Kit Included2201007001CA19" Blindplate 2UMounting Kit Included2201009001CA19" Blindplate 3UMounting Kit Included2201009001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	CPS-i3000.090.PS(R2)	0-90Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107014CA
Certifacte CalibrationSeparate works certificate for manufacturer calibration of the power supply4031107001CA19" Frontplate 2UMounting Kit Included2201006001CA19" Frontplate 3UMounting Kit Included2201007001CA19" Blindplate 2UMounting Kit Included2201009001CA19" Blindplate 3UMounting Kit Included2201009001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	CPS-i3000.150.PS(R2)	0-150Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107015CA
19" Frontplate 2UMounting Kit Included2201006001CA19" Frontplate 3UMounting Kit Included2201007001CA19" Blindplate 2UMounting Kit Included2201009001CA19" Blindplate 3UMounting Kit Included2201000001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	CPS-i3000.300.PS(R2)	0-300Vdc model incl. analogue interface and PowerSink / Fast Down Programming	3041107016CA
19" Frontplate 3UMounting Kit Included2201007001CA19" Blindplate 2UMounting Kit Included2201009001CA19" Blindplate 3UMounting Kit Included2201010001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	Certifacte Calibration	Separate works certificate for manufacturer calibration of the power supply	4031107001CA
19" Blindplate 2UMounting Kit Included2201009001CA19" Blindplate 3UMounting Kit Included2201010001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	19" Frontplate 2U	Mounting Kit Included	2201006001CA
19" Blindplate 3UMounting Kit Included2201010001CA19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	19" Frontplate 3U	Mounting Kit Included	2201007001CA
19" Subrack 2U3 Modules mountable only in conjunction with front panel 2U orderable2201004001CA19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	19" Blindplate 2U	Mounting Kit Included	2201009001CA
19" Subrack 3U5 Modules mountable only in conjunction with front panel 3U orderable2201005001CA19" Rack-Rail2x Support Rails for rack mount, mounting kit included2201008001CA	19" Blindplate 3U	Mounting Kit Included	2201010001CA
19" Rack-Rail 2x Support Rails for rack mount, mounting kit included 2201008001CA	19" Subrack 2U	3 Modules mountable only in conjunction with front panel 2U orderable	2201004001CA
	19" Subrack 3U	5 Modules mountable only in conjunction with front panel 3U orderable	2201005001CA
Cable Management Rail Cable support for rack mount, mounting kit included In preparation	19" Rack-Rail	2x Support Rails for rack mount, mounting kit included	2201008001CA
	Cable Management Rail	Cable support for rack mount, mounting kit included	In preparation
Wall Mount Kit Bundle-kit fits a single power supply, includes fixing screws to the power supply 2201014001CA	Wall Mount Kit	Bundle-kit fits a single power supply, includes fixing screws to the power supply	2201014001CA

Safety regulations: Please read these instructions completely before using the equipment. Keep these instructions on to hand. The device may only be operated by trained specialist staff.

Installation:

1) The device is designed for devices and systems that meet the standard requirements for hazardous voltages, power, and fire prevention.

2.) Installation and service only by trained specialists. The AC power must be switched off. The work is to be labelled; accidental reconnection of the system must be prevented.

3.) Opening the device, its modification, loosening bolts, or operation outside the specified herein specification or in an unsuitable environment, has the immediate loss of warranty to follow. We disclaim any responsibility for any resulting damage to persons or things.

4.) Note: The device must not be operated without an upstream circuit breaker (CB). We recommend the use of B-Type 25A. It is prohibited to use the unit without PE. It may be necessary upstream device has a power switch.

Warning:

Non-compliance these warnings can result in fire and serious injury or death.

- Never operate device without PE connection.
 Before connecting the device to the AC network, make wires free of voltage and ensure that it cannot accidentally switch on.
- 3. Allow neat and professional cabling.

4. Never open nor try to repair the unit. Inside are dangerous voltages that can cause electrical shock hazard.

5. Avoid metal pieces or other conductive material to fall into the item

6. Do not operate the device in damp or wet conditions

7. Do not operate the unit under EX-conditions



All parameters after 15 minutes of continuous operation at full load / 25°C / 230Vac 50/60Hz, unless otherwise indicated.